


Emergency Push Buttons


In case of emergency, the push button must be pressed in the area where the emergency occurred. This will start a luminous and audible alert in the central console(s) which can be cancelled only by unlocking the pushbutton that originated the call.

This ensures assistance during emergencies.

Model IC-E-18

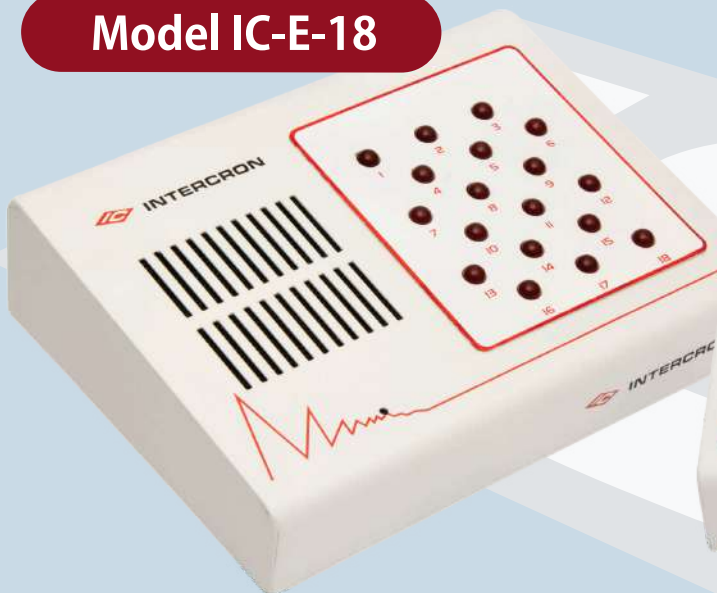

Model IC-E-9

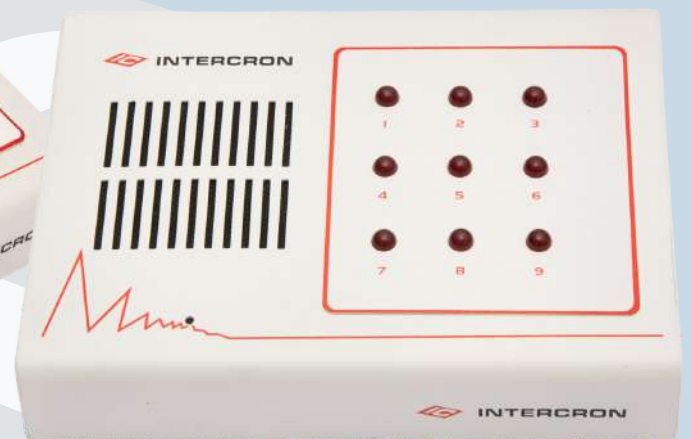

Emergency consoles:

- 10mm LED light signalling.
- Intermittent luminous and audible signal.
- Pre-adjustable volume control.
- Possibility of installing more than one console in parallel and choosing to activate one, another or both.
- Expandable system according to the necessity. 9 to 18 expander.
- Assembled in modules for easy replacement.
- Wall or desk fixation.

Emergency Push Buttons

Model IC-109



Emergency push buttons:

- Mushroom-type activation push button.
- Call LED indicator.
- Power supply for external flashing light.
- Wall fixing, integration in polyducts.



Installation in polyducts



Model IC-132

www.intercron.com

Telephone number / Fax: 54 11 4545-5400 (telephone line rollover) - E-mail: info@intercron.com
Address: Valdenegro 3201 - (C1431GAM) - Capital Federal - Argentina